


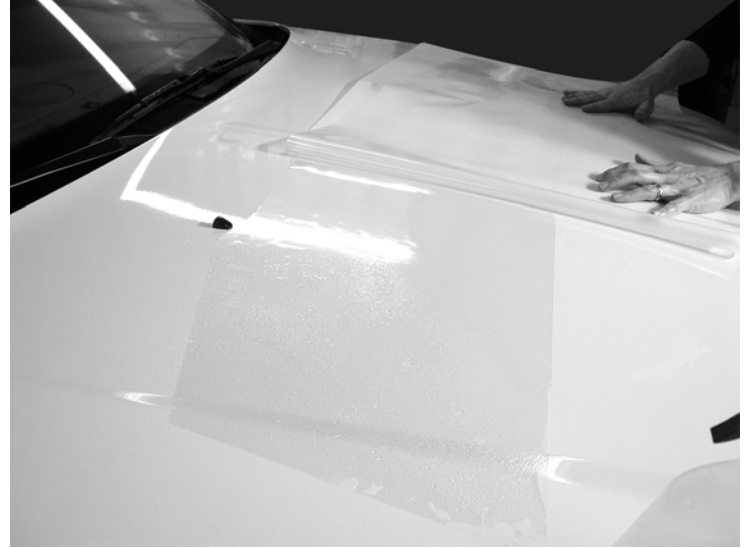

1. Lay the hood panel of the DuraShield+™ precut kit you wish to install liner side up on the vehicle hood just above the area where it will be installed. Thoroughly clean the application surface with isopropyl alcohol and dry with a clean, lint-free towel. Once it has dried, re-wipe the application surface with a micro-fiber towel to remove any remaining dust, debris and/or hair. Using the Easy On™ application solution (EOAS) mix **(2 parts - Easy On™, 2 parts - water, & 1 part - 70% isopropyl alcohol)**, thoroughly wet your fingertips throughout the application process.



2. Then begin to peel back the product liner and thoroughly soak the adhesive side of the film panel with the EOAS. After handling the back side of the DuraShield+ poly liner, please rinse your fingertips to ensure that any contaminants that may have been on the liner have not transferred to your fingertips. After rinsing, re-wet your fingers with the EOAS mixture. Once the liner is removed and the adhesive side of the material soaked, you can then turn the material over to begin placement on the vehicle hood.



3. Carefully begin to position the precut kit hood panel on the vehicle surface by lifting and tacking to surface. Try to make the film lay somewhat smoothly, but do not stretch the film onto the vehicle surface just yet. When completed with this step, you should have the panel lying close to the side and front edges of the hood.



4. Wet the surface of the film with the EOAS and begin to squeegee from the center of the panel. Using short, firm, overlapping strokes, squeegee from the center to the outer edge of the panel. The goal is to remove all the EOAS from under the film, leaving a smooth, bubble-free appearance. Upon inspection, if you find a bubble or small piece of debris, you can re-lift the film and re-wet the affected area. With wet fingers you can remove the debris and the re-squeegee the film into place without distorting its appearance.



5. Several of the other component pieces of a precut kit may be unusual sizes and shapes, such as the bumper piece. To prepare such pieces for installation, cut them apart from other pieces and lay them "graphics side up" on the vehicle hood. Carefully peel the component piece up, thoroughly wetting the adhesive side with the EOAS.



6. Carefully begin to position the precut kit component panel on the vehicle surface. Try to make the film lay somewhat smooth and flat, but do not stretch the film to fit onto the vehicle surface just yet. When completed with this step, you should have the panel lying close to the edges of the application area. Now begin squeegeeing as instructed in Step 4.



7. Carefully squeegee the material from the center out, and feel free to pull the edges of the film as you squeegee so the edge of the panel comes within 1/16" of the edge of the application surface. Lift and reposition the film as needed for proper alignment and to remove any trapped air bubbles or debris.



8. Apply the other component pieces from the precut kit, following Steps 1 through 7. The same application process can be followed for installing DuraShield+™ precut panels for application on the vehicle headlights and/or fog lights.